











Mazzetti

OFFICE MASSAGE CHAIR

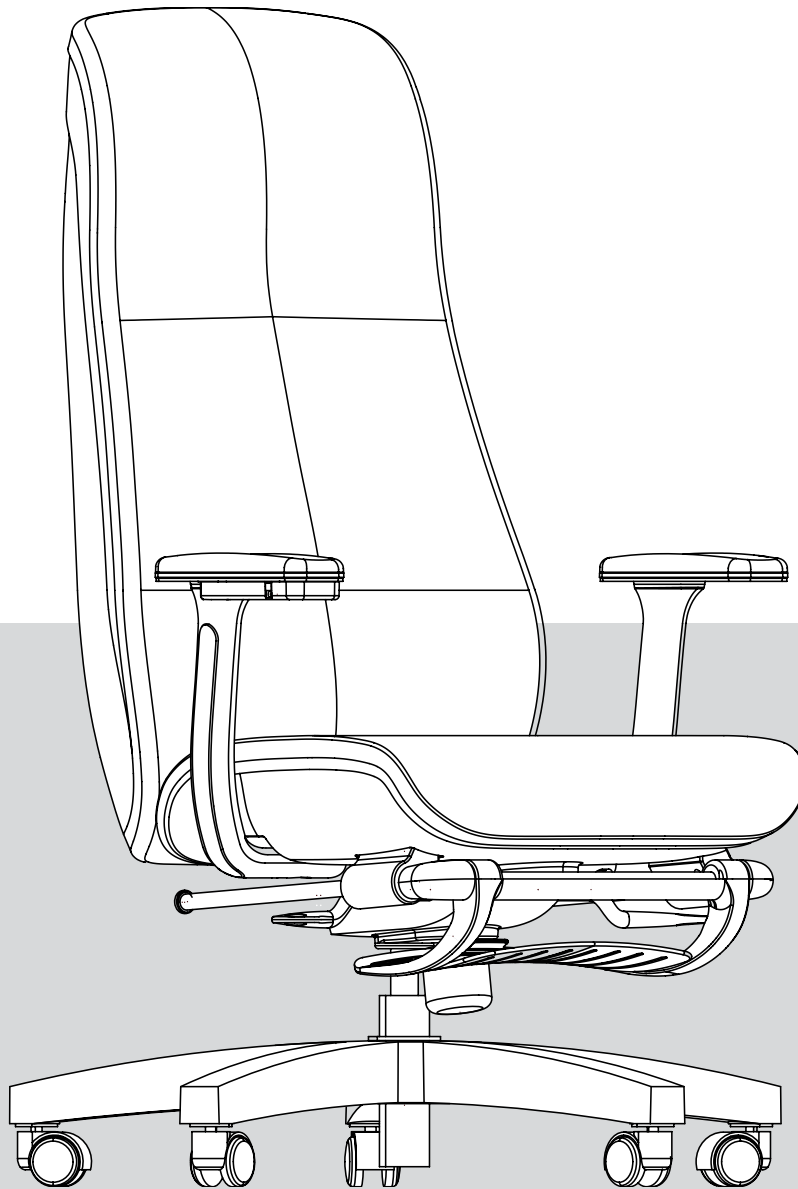

Instruction Manual

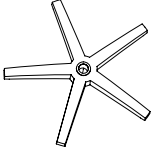1. Part List

		Part	
1.	x5		Caster
2.	x1		Seat
3.	x1		Allen Wrench
4.	x1		Leg Base
5.	x1		Backrest
6.	x1		Instruction
7.	x1		Gas Lift Cylinder
8.	x3		Screw
9.	x1		Charger

2. Chair Component




A.	Backrest	E.	Caster
B.	Screw	F.	Seat Post
C.	Gas Lift Cylinder	G.	Plug Socket
D.	Leg Base		


3. Seat Height Adjustment

**ATTENTION**

- Do not exceed the weight limit of 265lbs/120kg.
- Do not repeatedly adjust the height of the seat

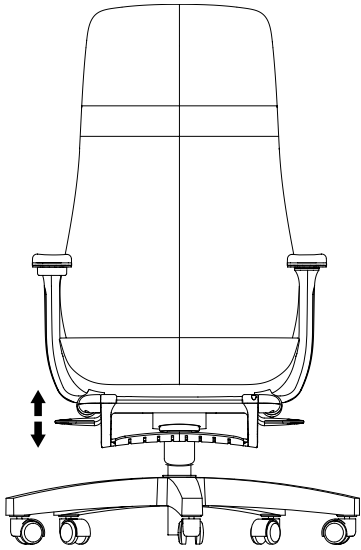

1. Seat Tilt Lock

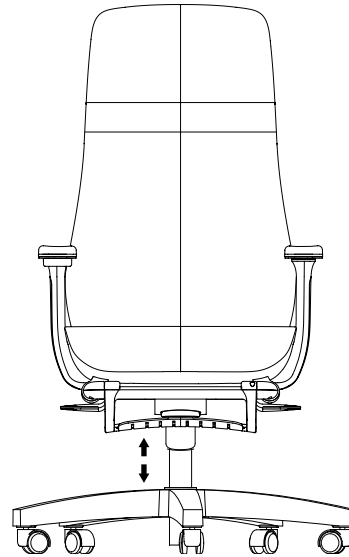


2. Seat Height Adjustment

4. Hidden Footrest

ATTENTION



- Only feet can be shelved on the footrest
- Do not put heavy objects on the footrest
- Placing heavy objects will cause footrest to deform or even break

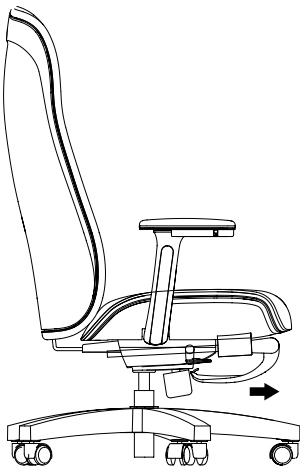

1. Footrest Pull Out




2. Footrest Swivel Outward



3. Footrest Extend


5. Tilt Angle Adjustment

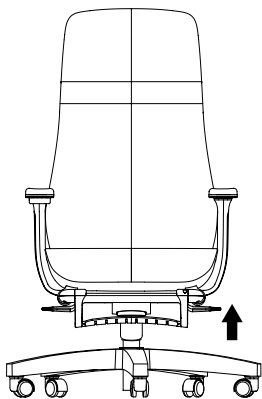

1. Left/Upward Adjustment




2. Backward Angle Adjustment

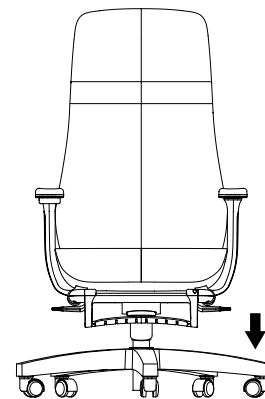


3. Left/Downward Adjustment




4. Lock State

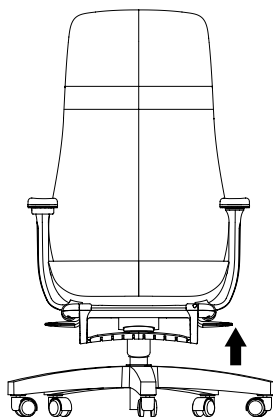

5. Left/Upward Adjustment

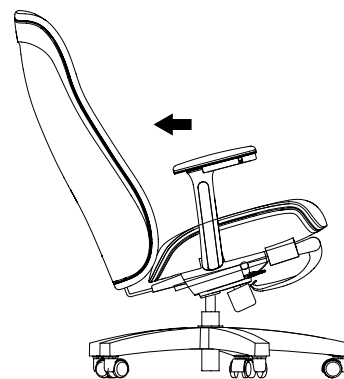

6. Flip up to unlock, down to lock

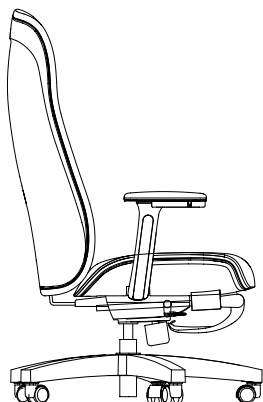


7. Home Position

6.Back Massage Mechanism




ATTENTION

- Please straighten out the adapter when charging, so as not to damage the adapter by entanglement or clamping
- The charging time should not exceed 3 hours.
- It is forbidden to use a non-original adapter to charge.
- This product belongs to Class I electrical appliances. Please make sure that the ground wire on the power outlet is well grounded to avoid adverse consequences such as electric shock due to leakage during use.
- Do not use this product on uneven ground.
- Do not put this product in a wet place, so as to prevent the machine from leakage caused by moisture.
- Do not place this product near a high temperature source, so as not to cause fire or skin damage.
- Lithium battery design, in the case of sufficient power, there is no need to connect the adapter to use.
- When the power is insufficient,
- Lithium battery design, in the case of sufficient power, there is no need to connect the adapter to use.
- When the power is insufficient, use the adapter to charge
- Can not be used while charging

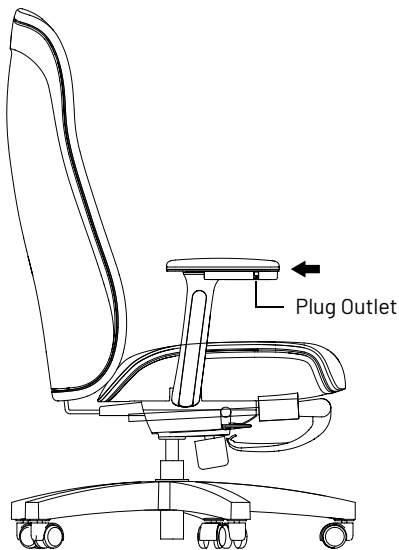



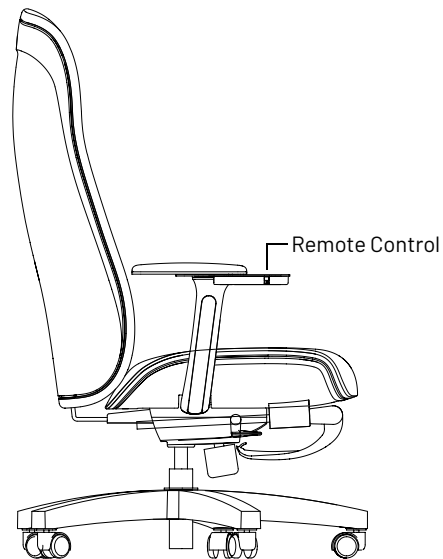






1. Right Armrest Back Adjustment



2. Remote Control Panel

7. Remote Control

	ON/OFF	Whole chair function ON/OFF (wait for one second press)
	Shoulder Up	To customize your massage, the chair will scan your back, detecting the ideal roller adjustments is need, 10 sites for shoulder adjustment
	Shoulder Down	
	Auto Program	Auto programs for choice
	Seat Massage	Seat function ON/OFF
	Language	Chinese/English/Korea
	Manual Program	manual program for choice
	Partial Up	1. Press this button, the roller will be moved up to the original position, release this button, it will stop to do partial fixed massage.
	Partial Down	2. Recovery to massage, press the Manual Program button again. Auto programs for choice

8. Safety Precautions



CAUTION

Before using, please read the “**SAFETY PRECAUTIONS**” carefully to ensure proper operation

Controller

- Do not use wet hands to operate the controller
- Do not splash water on the controller to avoid function failure
- Do not place heavy objects on the controller

Charger

- Do not use adapters outside of the original factory to avoid fire or damage to the product
- The charging time of the adapter shall not exceed 3 hours
- Do not plug the adapter with wet hands to avoid electric shock
- Remove the adapter by holding the plug of the adapter rather than the wire
- Do not squeeze adapter wires by products or other heavy objects
- Do not damage or damage excessive bending, pulling, twisting and knotting adapter wires
- When the adapter wire is damaged, do not disassemble or replace it without permission. A qualified professional should be contacted for replacement and repair

Usage Environment

- Do not use in higher than 40°C
- Not use in lower than 0°C
- Do not use this product in damp or dusty environment to avoid electric shock or machine failure
- Do not use during a lightning strike and unplug the adapter from the power socket
- Do not place the product on uneven ground for use

- Do not place this product near a stove or in direct sunlight

Prohibited Disassembly

- Do not disassemble the internal components of this product without permission to avoid the possibility of machine failure
- In addition if the repair technician designated by the company, the product must not be disassembled, repaired or modified. If there is any problem, please contact the dealer in time

Remove Plug

- Remove the power plug from the socket during maintenance. In addition, do not pull the plug with wet hands to avoid electric shock and injury
- Remove the power plug from the socket after use or when not in use
- In case of power failure, please immediately cut off the power switch and unplug the power plug from the socket

Attention

- Only people less than 265lb are acceptable
- Do not use other therapeutic equipment in the same time of using this unit
- This product can only be used by one person. Do not use two or more people at the same time
- Do not use it immediately after meals to avoid discomfort
- When using this product, please take off the neck decorations
- Before use, please confirm whether the fabric of all contact parts is damaged. If there is any

damage, please stop using immediately and entrust to repair in time

- Please stop using it immediately and consult your doctor if you feel any physical abnormalities during use
- It is recommended to use this product for 10 minutes
- If you do not use this product for a long time, please charge it every other month, otherwise it will damage the battery
- Do not stand on this product to avoid injury or malfunction

- This product must be kept in a well-ventilated place and not exposed to strong sunlight

Not recommended

- Patients with serious hyperostosis
- Swollen lump and patient thrombosis
- Patients with serious heart conditions
- Pregnant Women
- People that consume large amounts of alcohol
- People with diabetes
- People suffering from high fever
- People with distorted joints

You may desire to consult a physician and exercise care when operating this system

9. Troubleshooting guide

Problem/Issues	Possible Cause	Troubleshooting Method
Sounds like tapping or hum sounds	Normal sound of the motor working normally or the friction between the massage wheel and the cloth cover	Normal
Unable to turn on	No battery	Use after charging

If problems are not from above reasons, please turn off power supply and contact the retailer

Note: Do not dismantle the product by yourself, and our company shall shoulder no responsibility to the damage of the product or the inquiry of people caused by improper use. Thanks for your cooperation

10. Reminder

Be sure to check for the following symptoms during year-round use:

- Anxious burnt flavour
- The wire is sometimes switched on and sometimes switched off
- The power cord heats up
- Anomalies

If the above phenomenon occurs, in order to prevent the occurrence of faults and accidents, please stop using. Cut off the power switch, unplug the power switch, and contact the dealer you bought this product

11. Specification Information

Name	Massage chair	Rated Voltage Rated Frequency	110~220v 50/60Hz
Package Size	970x720x500mm	Rated Power	48W
G.W	35Kg	Noise	≤55dB
N.W	33kg	Safety Design	Class 1
Standard	GB4706.1-2005 GB4706.10-2008		

Mazzetti